
## **TIPS AND TRICKS**

FOR BUZZ BARS SQUARE DOUBLE OFFSET V2.1 COMPATABLE WITH SQUARE AXLE **BAFANG M300, BAFANG M400, YAMAHA PW-TE, YAMAHA PW-SE, SHIMANO STEPS 6000** 

#### **INCLUDES**

A 1X LEFT OFFSET BUZZ BAR



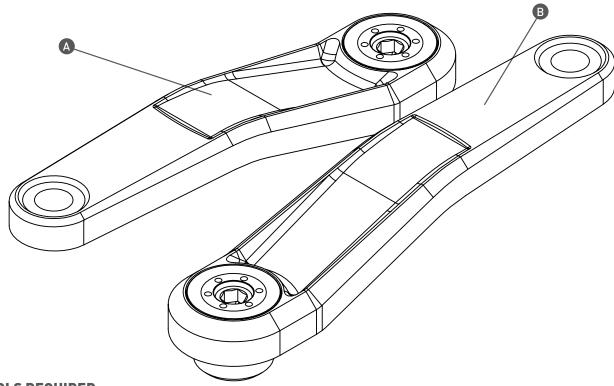

## **TOOLS REQUIRED**

- 8mm hex key
- All purpose lithium grease
- Loctite 243

### **INSTALL TIPS**

- Clean and lubricate axle with a multi-pupose grease before install.
- Apply Loctite 243 to bolt thread.
- Make sure left and right cranks are on the correct sides.
- Tighten to 60-70Nm


#### **PEDAL INSTALL**


- Grease pedal thread with a multi-pupose grease before install.
- Make sure left and right pedals are on the correct sides.
- Note left pedal is left hand thread (counter-clockwise to tighten).
- Tighten to 31-34Nm.



# **DIMENISONS**

Here are the basic dimensions of the cranks. Note the image is just an illsutation to explain the drawing.

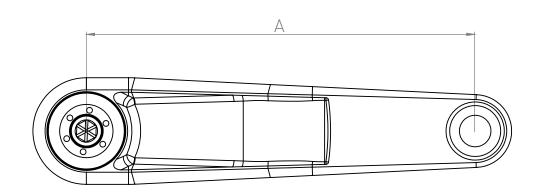

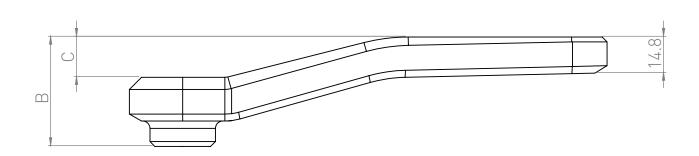


CRANK SET	CRANK	Α	В	С
BUZZ BARS D0160	LEFT	160	45.1	16.6
	RIGHT	160	45.1	16.6
BUZZ BARS D0170	LEFT	170	45.1	16.6
	RIGHT	170	45.1	16.6

Measurements in mm

## **MAINTENANCE**

The Buzzbars shouldn't need to be disassembled however if they are creaking or have had a hard life in the elements the an overhaul is a good idea.

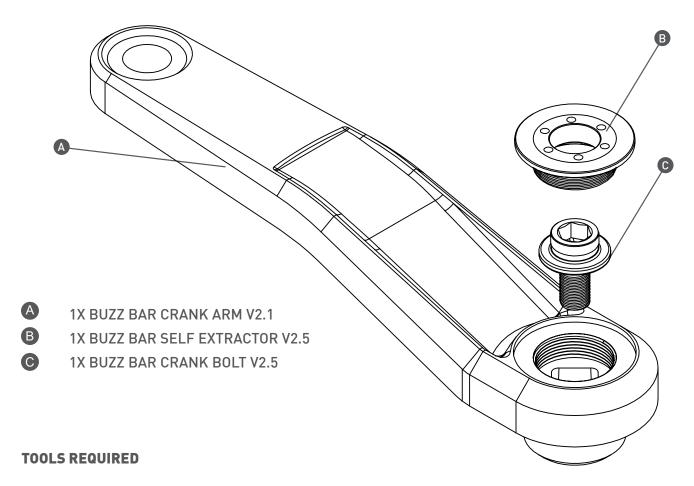

- Park Tool Pin Spanners SPA-2 (circlip pliers can work)
- Heat gun
- All purpose lithium grease
- Loctite 243
- 1. Remove the Buzz Bars from the motor.
- 2. Insert Park Tool Pin Spanners SPA-2 tool into two of the holes in the **Buzz Bar Self Extractor V2.5** and unscrew. You may need to heat the extractor with a heat gun to soften the loctite.
- 3. Now you can remove the Crank Bolt V2.5 which is just sitting in the crank.
- 4. Clean any residule grease and loctite from threads, square taper and any other surfaces.
- 5. Apply a smudge of lithium grease to the both the underside of the **V2.5 Crank Bolt** and under side of extractor and place bolt back into the Buzz Bar.
- 6. Apply a drop Loctite 243 to thread of Buzz Bar Self Extractor V2.5 and thread into Buzz Bar.
- 7. Insert the Park Tool Pin Spanners SPA-2 in to two of the holes and tighten.
- 8. Repeat for the other Buzz Bar.



## WARRANTY

At Lekkie we don't accept anything but the best workmanship and quality. If a part has slipped through our QC system and made it to your hands let us know and we will put it right.

If one of our products fails we want to know so we can make our products better. If you destroy a lekkie product in extreme use tell us. We can learn from this and sell you something so suit your needs.

If you are in anyway unhappy with your Lekkie product get in touch so we can put it right.

